



Caution: Confirm Template scale prior to use due to pdf and/or print scaling

**CRADLE MOUNTING TEMPLATE**

Cut out template and locate at the mounting position for the cradle  
 Use center punch (recommended), mark positions or drill directly  
 Dashed outline (roughly) represents installed cradle assembly.  
 Hole marked 'A' should only be drilled if an integral magnetic reed switch is to be used (drill to 5/16" dia)

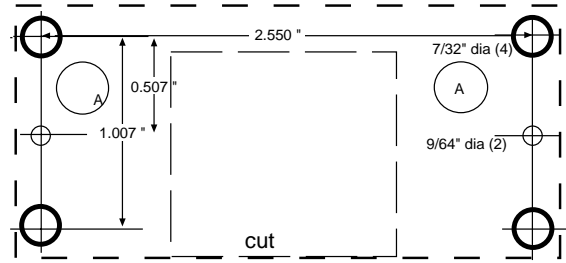

cut cut cut cut cut cut

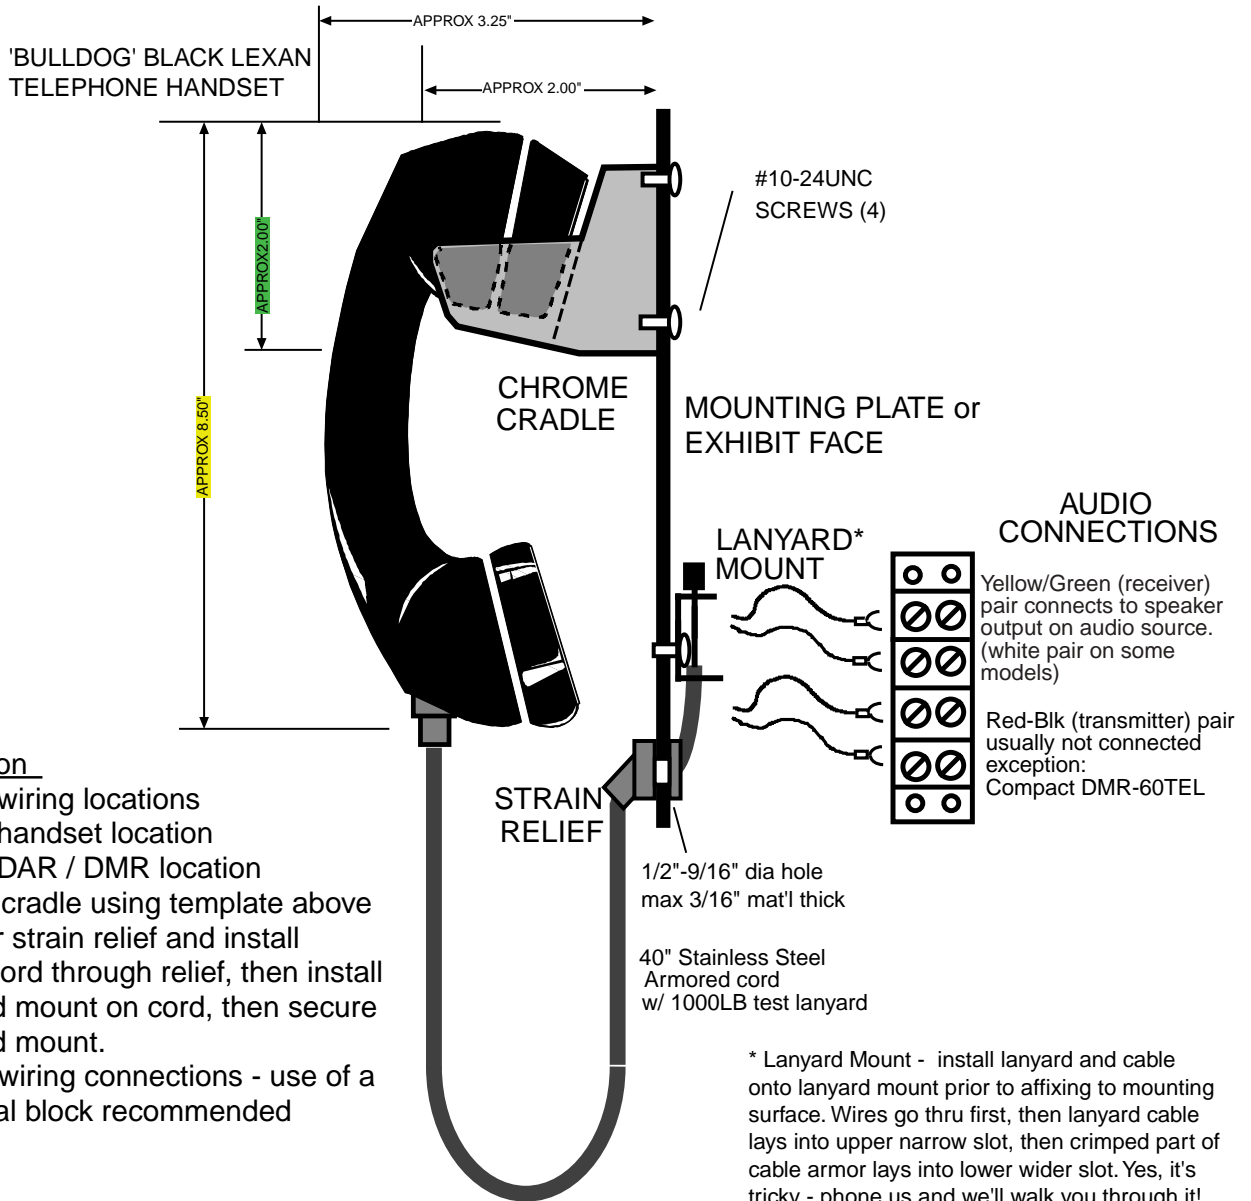

**Installation**

- ¥ Plan - wiring locations
  - handset location
  - DAR / DMR location
- ¥ Mount cradle using template above
- ¥ Drill for strain relief and install
- ¥ Feed cord through relief, then install lanyard mount on cord, then secure lanyard mount.
- ¥ Finish wiring connections - use of a terminal block recommended

\* Lanyard Mount - install lanyard and cable onto lanyard mount prior to affixing to mounting surface. Wires go thru first, then lanyard cable lays into upper narrow slot, then crimped part of cable armor lays into lower wider slot. Yes, it's tricky - phone us and we'll walk you through it! Drill additional screw holes as needed to affix to mounting surface

**Installation Requirements**  
**'BULLDOG' TELEPHONE HANDSET**  
 w/ Chrome Cradle

