


# PARADOX Digigard 50 Infra-Red Motion Sensor Installation Instructions

(addendum)

## Model 50 Form C Motion Sensor (cover removed)

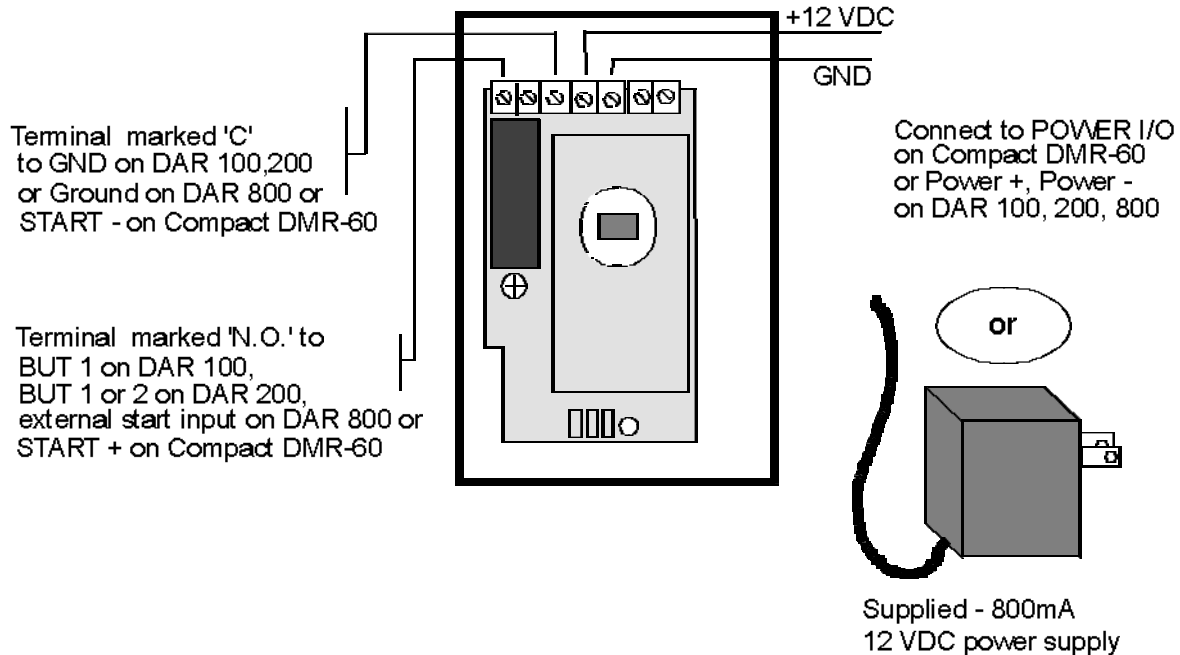

on initial power-up allow about 1 minute to allow the unit to 'settle'.

effective field of view can be modified by 'masking' the front lens with tape, etc.

Where wiring is added to run between various components it is **ESSENTIAL** that proper connections be used

**NOTE: Disconnect one side of switch contacts prior to recording**

When using the Digigard 50 with one of the Compact DMR-60 or one of the DAR models, a common power supply can be used, eliminating the need for the supply that was shipped with the Digigard 50. Simply connect the power terminals on the Digigard 50 to the Power I/O terminals on the Compact DMR or DAR Recorder



[www.stoplisten.com](http://www.stoplisten.com)  
1 800 387-2365